



Alltest Instruments, Inc.

500 Central Ave.
Farmingdale, NJ 07727

P: (732) 919-3339
F: (732) 919-3332

alltestchambers.net
sales@alltest.net

Alltest Instruments is your one stop shop for environmental test solutions. We specialize in premium refurbished chamber sales, rentals, service, calibration, and controller upgrades.

Why buy from Alltest?

QUALITY YOU CAN TRUST

All chambers include a 90 day warranty and 5 day right of return. Each unit is tested to OEM specification and comes with our personal satisfaction guarantee.

TOP OF THE LINE EQUIPMENT

Alltest is the largest supplier of Thermotron environmental testing chambers.

EXPERT SERVICE WITH A PERSONAL TOUCH

Alltest Instruments technicians have over 30 years of experience with environmental design and chamber repair.

CUSTOM DESIGN SOLUTIONS

Our team is available to come on-site to help you design and install the right system for your specific needs.

Get a quote today!

Call (732) 919-3339

Email sales@alltest.net

Visit alltestchambers.net/contact

Return Policy: All items on this site carry a 5 day right of refusal, 90 day warranty and a 30 day resellers guarantee.

Product Availability: If an item you ordered has to be put on backorder, we will contact you immediately, and give you an estimated delivery date. When it becomes available, we will contact you before shipping to confirm that you still need the product. In the event we are unable to fulfill the order we will offer you a substitute or cancel the order. We reserve the right to cancel any order placed at any time. Price and delivery are subject to availability.

Shipping Cost: Buyer pays actual shipping cost of UPS or FedEx. No handling charges.

Sales Tax: Only New Jersey residents and companies pay sales tax. Unless you have a tax resale number.

Payment Terms For US Customers: Visa, MasterCard, AMEX, Wire Transfer, Prepay, PayPal, or COD. Repeat customers can request terms.

HALT AND HASS IMPROVE PRODUCT RELIABILITY



Thermotron's innovative Accelerated Stress Testing systems for Highly Accelerated Life Testing (HALT) and Highly Accelerated Stress Screening (HASS) find product failures fast with patented industry-leading technology. Performing HALT and HASS improves product reliability by maximizing lab efficiencies, all while reducing costs associated with warranties and recalls.

FEATURES



Adjustable Air Ducts

Allows users to force air directly onto the product under test.

Individual Impactor Monitoring and Control

Maximizes vibration effectiveness.

Oxygen Monitor and Alarm

Cuts off LN₂ supply to the chamber and sounds an alarm when oxygen levels are low.

AST-8800 Controller

Intuitive program displays temperature and vibration levels on one screen.

Ergonomic Workstation

Ideal for standing or sitting.

Adjustable Air Ducts

optimizes airflow to the product(s) under test

Convenient Product Access

maintain visual and physical access to products under test through windows, doors, and ports

Data Acquisition (DAQ) System

optional, allows control and monitoring of product under test

Door Interlocks

prevent the door(s) from opening while operating, and prevents operation when the doors are open

Internal Thermocouple Junction Box

enables convenient multi-point temperature monitoring

Oxygen Monitor and Alarm

interfaces with the chamber's LN₂ system to ensure safe oxygen levels

Product Temperature Change Rates

up to 70°C/minute heating and cooling

Proportional Control Liquid Nitrogen System

maximizes cooling change rates while reducing LN₂ consumption

Safety Stop Mode

automatic purge and reset protects operators, products, and the equipment

Sound-deadening Insulation

minimizes noise during operation

Additional Optional Features

- Accumulated Fatigue, Transmissibility, and Peak Probability Distribution Software
- Additional Accelerometers
- Additional Access Ports
- Custom Finishes
- Data Acquisition System
- Gaseous Nitrogen (GN₂) Injection System
- Mechanical Refrigeration Options
- Multi-Zone Control, *patented*
- TestTools Communication Boards
- Vacuum Jacketed Valves
- Vibration Fixtures

REPETITIVE SHOCK TABLE

HALT and HASS are powered by repetitive shock vibration, which is achieved through a shaker table. Pneumatic impact hammers strike the bottom of the table, providing vibration in 3 axes and 3 rotations, simultaneously.


Thermotron's patented repetitive shock tables have a unique thermal isolation system that minimizes thermal loading on the chamber and provides a stable condition for impactor operation. Impactor cooling mechanisms help impactors last longer and reduce maintenance downtime for more effective and efficient testing. The shaker's standoff mounting design maximizes vibration transmissibility and provides accurate test results.



MULTI-ZONE CONTROL

By nature, repetitive shock shakers are not uniform across the table's entire surface, nor can it control to one Grms level; this can produce inaccurate results because the vibration level the product actually experiences can be higher or lower, depending on accelerometer location.

Thermotron's exclusive, patented Multi-Zone Control fixes this problem. This optional feature controls the repetitive shock table in one, two, or four table zones. Through the AST-8800, Multi-Zone Control automatically makes dynamic adjustments to each zone, compensating for system variability including table inconsistencies, impactor wear, air supply, fixtures, and product mounting to accurately test multiple products simultaneously. Multi-Zone Control guarantees superb uniformity to test products within 5% of each zone's control Grms making HALT and HASS testing more controllable and consistent.

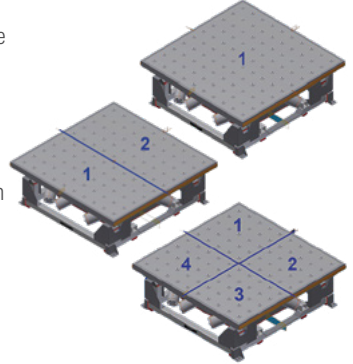


Each zone can also be set to a different Grms level or Multi-Zone Control can be turned off to control the entire table to one Grms level.

AST-8800 CONTROLLER

The AST-8800 Controller features an intuitive Windows®-based graphical user interface. The color monitor displays power spectral density, temperature, and vibration data on one screen. Users define how multiple accelerometers and thermocouples are used to control and monitor stresses delivered to the product under test.

The AST-8800 Controller can be configured to monitor run-time on wear items and automatically alert the operator when periodic maintenance is required. The system is Ethernet-compatible and web-enabled for virtual anytime/anywhere access. Thermotron's multi-level, password-based security system protects sensitive data.

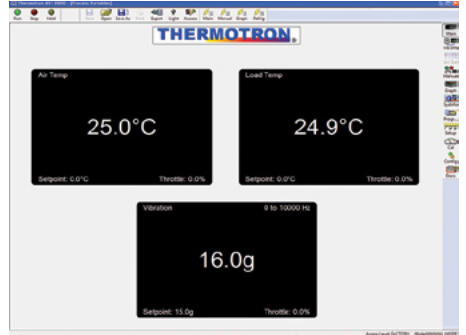

ThermAlarm®

Independently prevents temperature from exceeding user-defined limits.

Product Temperature Control

Controls air temperature based on the temperature of the product.

Data Logging

Reports system events, temperature, and vibration levels.

Program and Data Storage

Available on a hard drive, DVD, USB, or a network drive.

Built-In Vibration Spectrum Analyzer

Displays table and product vibration response.

Product Vibration Control

Allows vibration control of up to 16 product locations.

System Monitor

Monitors the chamber's refrigeration pressures (*mechanical refrigeration only*).

Power Spectral Density Abort Limits

Prevents inconsistent vibration during HASS.

Multi-Channel Vibration Control

Monitors and controls accelerometers using maximum, minimum, mean, or median readings.

Vibration Alarm and Abort Limits

Prevents vibration levels from exceeding user-defined limits.

On-Board Signal Generator Verification

Simplifies vibration calibration.

Impactor Monitor System (*patented*)

Illustrates the impactors' status on the screen.

The controller monitors the air pressure of each impactor during tests, adjusting air pressure for more consistent and accurate results.

GENERAL SPECIFICATIONS

	AST-8	AST-18	AST-35	AST-70
Interior Dimensions— WxDxH Inches Centimeters (approx.)	24 x 23.5 x 24 61 x 60 x 61	33 x 34 x 30 84 x 86 x 76	42 x 42 x 40 107 x 107 x 102	54 x 56 x 40 137 x 142 x 102
Exterior Dimensions— WxDxH Inches Centimeters (approx.)	78 x 34 x 78 198 x 86 x 198	90 x 57 x 87 229 x 145 x 221	89 x 61 x 105 226 x 155 x 267	104 x 69 x 104 264 x 175 x 264
Temperature Range	-100°C to 200°C (-148°F to 392°F)	-100°C to 200°C (-148°F to 392°F)	-100°C to 200°C (-148°F to 392°F)	-100°C to 200°C (-148°F to 392°F)
Temperature Change Rate	Greater than 50°C/min (90°F/min) on products1		Greater than 70°C/min (125°F/min) on products1	
Blower HP	3/4 HP	3 HP	7.5 HP (5 HP CE)	10 HP
Airflow	370 SCFM (175 liters/sec)	1,400 SCFM (660 liters/sec)	4,000 SCFM (1,880 liters/sec)	6,000 SCFM (2,830 liters/sec)
Heater Size	20 kW ²	40 kW ²	96 kW ²	108 kW ² (102 kW at 400V)
Power¹ (Full Load/ Minimum Service)				
230 / 3 / 60 ^{2,3}	53 Amps / 60 Amps	114 Amps / 125 Amps		
400 / 3 / 50 ^{2,3}	33 Amps / 40 Amps	65 Amps / 70 Amps	153 Amps / 175 Amps	164 Amps / 175 Amps
460 / 3 / 60 ^{2,3}	29 Amps / 30 Amps	57 Amps / 60 Amps	134 Amps / 150 Amps	152 Amps / 175 Amps
REPETITIVE SHOCK TABLES				
Repetitive Shock Table Inches / Centimeters (Number of Impactors)	18 x 18 / 46 x 46 (4)	18 x 18 / 46 x 46 (4) 26 x 26 / 66 x 66 (4) 30 x 30 / 76 x 76 (5)	26 x 26 / 66 x 66 (4) 30 x 30 / 76 x 76 (5) 34 x 34 / 86 x 86 (9) 38 x 38 / 97 x 97 (9)	46 x 46 / 117 x 117 (16) 50 x 50 / 127 x 127 (16)
Frequency Range	2 to >20,000 Hz			
Acceleration Levels	50 Grms 2-10,000 Hz			
Maximum Air Consumption	90 PSI (6.2 BAR) Compressed Air 9.5 SCFM / Impactor Maximum (5.5 SCFM / Impactor Typical)			
Axes Excited	3 Linear, 3 Rotational			
Grid Pattern	4" x 4" Grid (100 mm available)			
Control/Monitor Channels	8 Accelerometer Input Channels (Up to 16 Available)			

Custom sizes and performance configurations available. The addition of accessories may impact performance.

General specifications subject to change without notice. Certain export limitations may apply, consult factory for details.

¹ Dependent on range and chamber loading.

² Smaller-size heating systems available, which reduces electrical service.

³ Other input voltages and frequencies available.

For more than 55 years, Thermotron has provided quality environmental test equipment. We've worked to establish a trusted reputation among our peers, and when people hear the name *Thermotron*, they have confidence in the testing of their own product. We've been building our name since 1962; now it's your turn.

**QUALITY. TRUST.
CONFIDENCE.**
— BUILD YOURS WITH A —
THERMOTRON.

THERMOTRON.COM

US: 291 Kollen Park Drive, Holland, Michigan 49423 | P: (616) 393-4580 | F: (616) 392-5643 | info@thermotron.com

UK: Winch Rd., Kent Science Park, Sittingbourne, Kent, ME9 8EF England | P: 01795 436333 | F: 01795 436777 | sales@thermotron.co.uk